

CABMATE MODEL FRTS60-A 2911-A000 AFTERMARKET


FITS: Fits most 60" Freightliner sleepers.

Wt: 33 Wt. Added: 17
Installation Time: 3-4 hours

NOTES:

PARTS LIST

1	2911-1000	UNIT TOP (PASSENGER SIDE)1
2	2911-2000	UNIT TOP (DRIVER SIDE)1
3	2911-3000	UNIT BOTTOM (PASSENGER SIDE)1
4	2911-4000	UNIT BOTTOM (DRIVER SIDE)1
5	2993-2015	LATERAL CONTROL ROD1
6	1102-0023	AIR SPRING2
7	1201-1043	SHOCK ABSORBER2
8	1301-0021	HEIGHT CONTROL VALVE1
9	2990-0700	VALVE ARM1
10	1500-0246	VALVE LINKAGE1
11	1302-1105	MALE ELBOW (1/8 NPT)2
12	1302-0090	0.250 AIRLINE5.7'
13	1500-0070	RUBBER BUMPER2
14	1401-0816	1/4 X 2 UNC BOLT2
15	1476-0800	1/4 UNC LOCK NUT2
16	1401-1012	5/16 X 1 1/2 UNC BOLT2
17	1476-1000	5/16 UNC LOCK NUT2
18	1403-1428	7/16 X 3 1/2 UNF BOLT2
19	1403-1430	7/16 X 3 3/4 UNF BOLT2
20	1477-1400	7/16 UNF LOCK NUT4
21	1404-1624	1/2 X 3 UNF BOLT (GRADE 8)1
22	1404-1626	1/2 X 3 1/4 UNF BOLT (GRADE 8)1
23	1477-1601	1/2 UNF TOP LOCK NUT (GRADE C)2
24	1401-2014	5/8 X 1 3/4 UNC BOLT2
25	1401-2016	5/8 X 2 UNC BOLT2
26	1485-2000	5/8 LOCK WASHER4
27	1470-2000	5/8 UNC NUT4
28	2911-0002	5/8 SPECIAL MOUNT WASHER2
29	1487-2000	5/8 FLAT WASHER4
30	1475-2400	3/4 UNF JAM NUT2
NS	1350-0000	PRESSURE PROTECTION KIT1

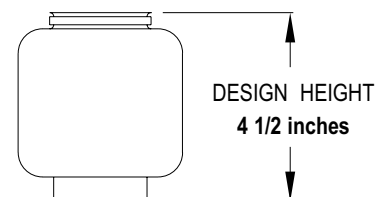

ford

freightliner

gmc

international

kenworth

mack
marron

peterbilt

sterling

volvo
western star