

**CABMATE MODEL
KWB689-B**
2531-A000 AFTERMARKET
2531-B000 FACTORY

SERVICE PARTS ONLY

PARTS LIST


1	2531-1000	UNIT TOP1
2	2531-2000	UNIT BOTTOM1
3	2531-1010	TOP VALVE LINKAGE MOUNT ASSEMBLY1
4	2531-2006	BOTTOM VALVE MOUNT1
5	2993-2008	LATERAL CONTROL ROD1
6	1102-0031	AIR SPRING1
7	1201-1043	SHOCK ABSORBER2
8	1301-0044	HEIGHT CONTROL VALVE1
9	2990-0700	VALVE ARM1
10	1500-0235	VALVE LINKAGE1
11	1500-0070	RUBBER BUMPER1
12	1302-1105	MALE ELBOW (1/8 NPT)1
13	1302-0090	1/4 AIRLINE1.2'
14	1401-0806	1/4 X 3/4 UNC BOLT4
15	1401-0816	1/4 X 2 UNC BOLT2
16	1476-0800	1/4 UNC LOCK NUT6
17	1401-1010	5/16 X 1 1/4 UNC BOLT1
18	1476-1000	5/16 UNC LOCK NUT1
19	1403-1428	7/16 X 3 1/2 UNF BOLT2
20	1403-1430	7/16 X 3 3/4 UNF BOLT2
21	1477-1400	7/16 UNF LOCK NUT4
22	1401-1606	1/2 X 3/4 UNC BOLT1
23	1460-0002	1/2 X 3 1/8 UNF CSK MACHINE SCREW2
24	1477-1601	1/2 UNF TOP LOCK NUT2
25	1485-1600	1/2 LOCK WASHER1
26	1401-2014	5/8 X 1 3/4 UNC BOLT2
27	1485-2000	5/8 LOCK WASHER2
28	1470-2000	5/8 UNC HEX NUT2
29	1475-2400	3/4 UNF JAM NUT1
NS	1350-0000	PRESSURE PROTECTION KIT1

FITS: Most Kenworth:

- T-400A and T-450 conventional tractors manufactured **after June 1992** with rear cab support Kenworth part no. K235-1646.
- T-600A, T-800A, and W-900B conventional tractors with rear cab support Kenworth part nos. K235-1436 or K235-1488. (It may fit 1983 through 1985 models with crossmember substitution.) Recommended for severe service applications.

Wt: 33 lbs. Wt. Added: 26 lbs.
Installation Time: 3-4 hours

NOTES:

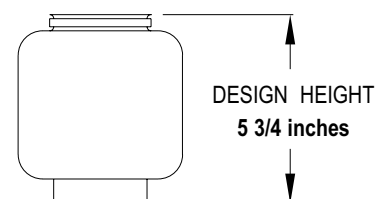

ford

freightliner

gmc

international

kenworth

mack
marron

peterbilt

sterling

volvo
western star