


PARTS LIST

1	1102-0083	SPRING-AIR2
2	1202-1286	SHOCK ABSORBER2
3	1350-0113	ASSEMBLY-HEIGHT CONTROL VALVE1
4	1302-4001	RUN TEE, 1/4 TB 1/8 M-NPT, DOT1
5	1302-5045	CONNECTOR, 1/4 TB 1/8 M-NPT, PUSH-IN DOT2
6	1401-0814	1/4 X 1 3/4 UNC HEX CAP SCREW (GRADE 5)2
7	1401-1012	5/16 X 1 1/2 UNC HEX CAP SCREW (GRADE 5)2
8	1401-2028	5/8 X 3 1/2 UNC HEX CAP SCREW (GRADE 5)2
9	1401-2030	5/8 X 3 3/4 UNC HEX CAP SCREW (GRADE 5)2
10	1420-1628	1/2 X 3 1/2 UNF SOC FLAT CSK HD CAP SCREW1
11	1460-0001	.50 X 5.00 UNC SS BOLT-CHAMFERED1
12	1475-2400	3/4 UNF JAM NUT2
13	1476-0800	1/4 UNC HEX CENTER LOCK NUT (GRADE B)2
14	1476-1000	5/16 UNC HEX CENTER LOCK NUT (GRADE B)2
15	1476-1600	1/2 UNC HEX CENTER LOCK NUT (GRADE B)1
16	1477-1601	1/2 UNF HEX TOP LOCK NUT (GRADE C)1
17	1477-2005	5/8 UNF HEX TOP LOCK NUT (GRADE B)4
18	1487-2000	5/8 TYPE A PLAIN WASHER4
19	1488-1601	1/2 SS SAE PLAIN WASHER2
20	1500-0070	BUMPER-JOUNCE, 1.752
21	1500-0253	LINKAGE-VALVE, HEIGHT CONTROL (4.88)1
22	2551-0101	AIR SPRING UPPER PLATE2
23	{1}	BRACKET-MOUNT1
24	{2}	BRACKET-MOUNT1
25	{3}	BRACKET-MOUNT, CONTROL ROD1
26	2991-0024	PIVOT BALL KIT1
27	2991-0026	KIT-PIVOT BALL1
28	{4}	LATERAL CONTROL ROD1
{1}	2551-7501	For frames with 12 mm fasteners	
	2551-7503	For frames with 16 mm fasteners	
{2}	2551-7502	For frames with 12 mm fasteners	
	2551-7504	For frames with 16 mm fasteners	
{3}	2551-7506	For frames with 12 mm fasteners	
	2551-7507	For frames with 16 mm fasteners	
{4}	2993-3009	For trucks with no frame inserts (5/16 or 3/8 frames)	
	2993-3010	For trucks with frame inserts (1/4 insert)	
	2993-3011	For trucks with double frame inserts (1/4 and 3/8 insert)	

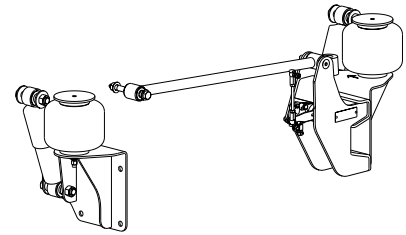

CABMATE MODEL KWCSA 07-09

2551-R000

KW 86" Aerocabs
w/ no frame inserts (5/16 or 3/8 frames)

2551-T000

KW 86" Aerocabs
w/ single frame inserts (1/4 insert)

2551-U000

KW 86" Aerocabs w/
double frame inserts (1/4 or 3/8 inserts)

2551-AA00

Same as KWCSA-07,
for use w/ 16mm frame mount fasteners

2551-AB00


Same as KWCSA-08,
for use w/ 16mm frame mount fasteners

2551-AC00

Same as KWCSA-09,
for use w/ 16mm frame mount fasteners

2991-0031

Component package
for all 86" Aerocabs

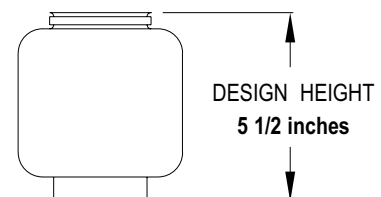

ford

freightliner

gmc

international

kenworth

mack
marron

peterbilt

sterling

volvo
western star