

CABMATE MODEL
KWB500
2535-0000 FACTORY


PARTS LIST

1	1101-A042	AIR SPRING WITH ATTACHMENTS1
2	1202-0044	SHOCK ABSORBER2
3	1301-0018	HEIGHT CONTROL VALVE1
4	1302-1038	.25 TUBE SUPPORT1
5	1302-1105	ELBOW, 1/4 TB 1\8 M-NPT1
6	1302-0090	.250 AIRLINE8'
7	1401-0816	1/4 X 2 UNC HEX CAP SCREW (GR 5)2
8	1403-1218	3/8 X 2 1/4 UNF HEX CAP SCREW (GR 5)2
9	1403-1428	7/16 X 3 1/2 UNF HEX CAP SCREW (GR 5)4
10	1476-0800	1/4 UNC HEX CENTER LOCK NUT (GRADE B)2
11	1477-1400	7/16 UNF HEX CENTER LOCK NUT (GRADE B)4
12	1500-0243	LINKAGE-VALVE, HEIGHT CONTROL (3.63)1
13	1500-0840	RUBBER BUSHING PACKAGE2
14	2535-1000	UNIT TOP1
15	2535-2000	UNIT BOTTOM1
16	2535-3000	LATERAL CONTROL MOUNT1
17	2535-4001	LATERAL CONTROL ROD1
18	2990-0700	ASSEMBLY-ARM, VALVE1
19	2991-0026	KIT-PIVOT BALL1

FITS: Factory installed on C500B series.

Wt: 32 lbs.

NOTES:

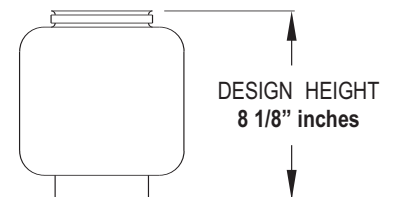

ford

freightliner

gmc

international

kenworth

mack
marmor

peterbilt

sterling

volvo
western star